


Caliper Covers Quick Installation Guide

MGP CALIPER COVERS

C

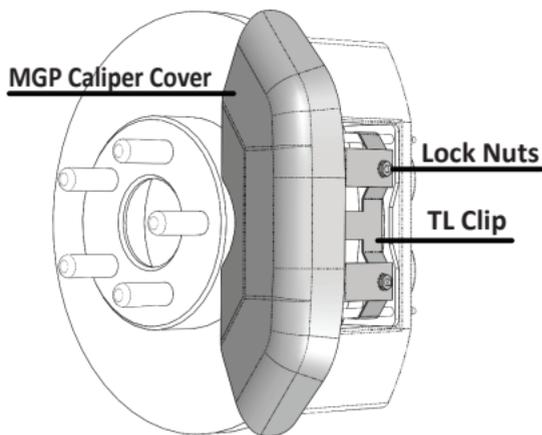

TOOLS REQUIRED



- 3/8 wrench
- .013 feeler gauge
(or included .013 paper strip)

IMPORTANT

- Clip baggies marked FRONT & REAR. Keep separate.
- Space between wheel and face of caliper must be 1/8" min.

1 TL Clip


Place clip at an angle & engage the bottom leg around the brake caliper pin .

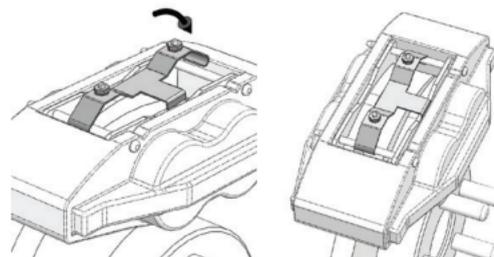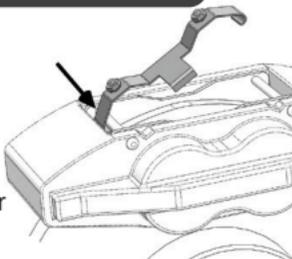


Push until clip snaps into place.

2 MGP Caliper Cover



Place bridges over studs and rotate down until the caliper cover snaps into place .

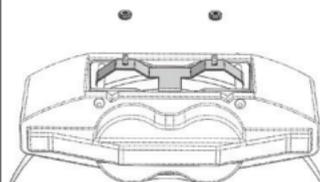

Remove lock nuts from snap clips.

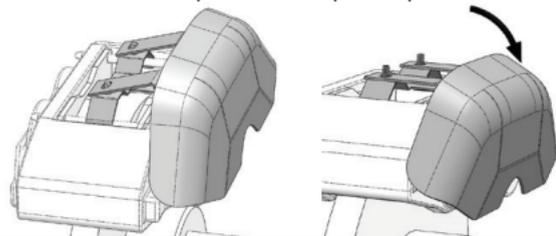

3 Lock Nuts

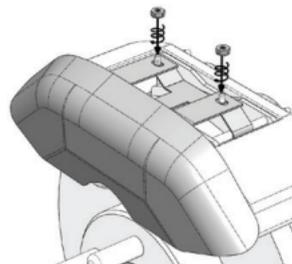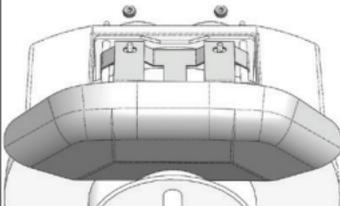

Install the supplied lock nuts onto the threaded studs to secure clip to bridge. Tighten with 3/8-inch wrench or socket to 25 in pounds. Do not overtighten nuts.

Troubleshooting Guide

MGP CALIPERCOVERS

Need Help?


✉ Email • TECH@CALIPERCOVERS.COM

☎ Tech Support • 1.877.995.0003 - Option 2

Scan the QR code for the
installation instructions video

IMPORTANT!

Check clearance between clip and brake pad. A gap of at least .013 inch (.32 mm) is recommended (enough to slide the paper strip in and out without sticking). Re-install wheel and tighten lugnuts per manufacturer's specification.

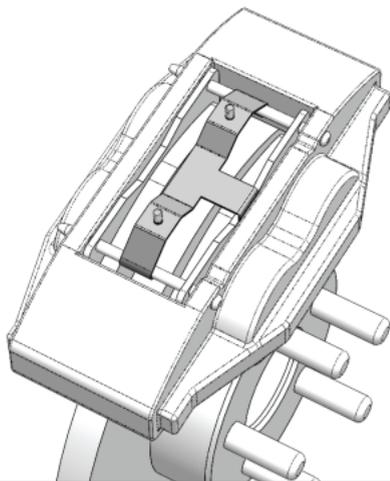

Caliper Cover should rest directly against the face of the brake caliper. The installer should verify that the bridges are set to 88° as depicted on image. Installer may adjust as needed.

