

INSTALLATION INSTRUCTIONS

CUSTOMER SERVICE

Phone: 866-900-8800 • 8:30 am - 5:00 pm Mon - Fri CST

Email: info@undercoverinfo.com




MODEL SPECIFIC GUIDE

HIDDEN HINGE VERSION

4158


Model 4158 Toyota Tundra Crew Max 5.5' Short Bed 2022 (Will Fit With Cargo Management System)

Deck Rail System Hardware
8 - 1" Bolts
8 - Square Nut Plates

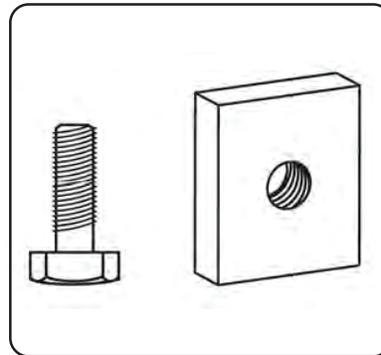

RE: Step 2 on the Quick Start Guide

Remove the end caps from the Deck Rail System. Slide the tie down cleats towards the center of the Deck Rail. Slide the Square Nut Plates in place and position at rear of bed, install 1" bolts and washers according to diagram below and position the bracket according to the chart on reverse side.

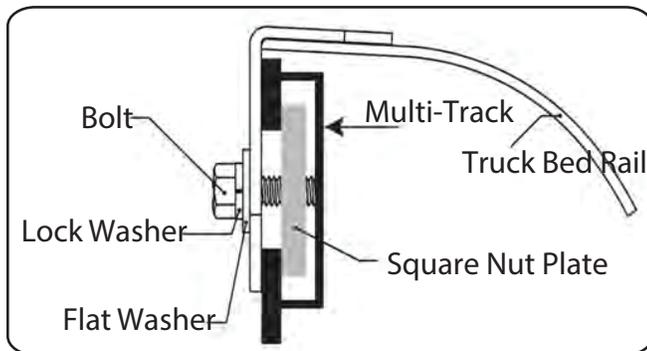




MODEL SPECIFIC GUIDE HIDDEN HINGE VERSION

Model 4158 Toyota Tundra 5.5' Short Bed 2022

Continued - RE: Step 2 on the Quick Start Guide



Measurement for the rear mounting bracket is 40 1/4" from the back side of the bulkhead to the front edge of the bracket.

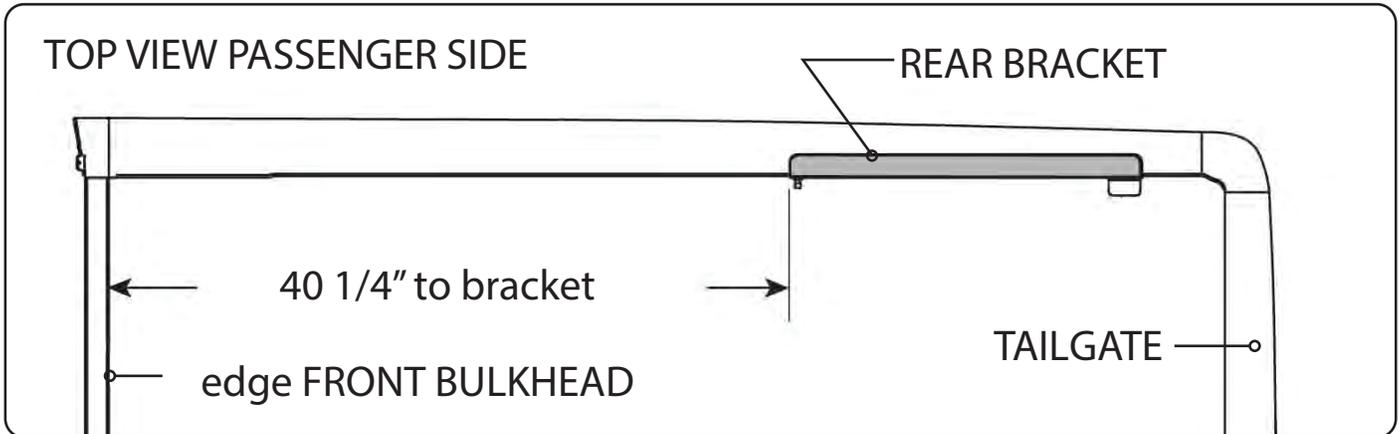

RE: Step 3 on the Quick Start Guide

Measurement for the front bracket is 18 1/4" from the back side of the bulkhead to the end of the bracket.

The fit of the cover to the truck bed is determined by the front mounting brackets. This measurement is a good starting point. Unfortunately not all truck beds are assembled 100%, so some adjustments may be necessary after the cover is set on the truck.

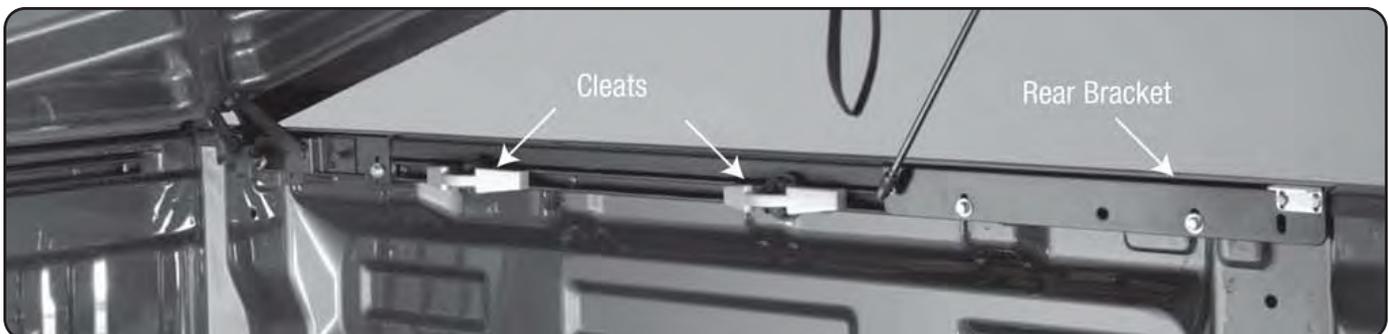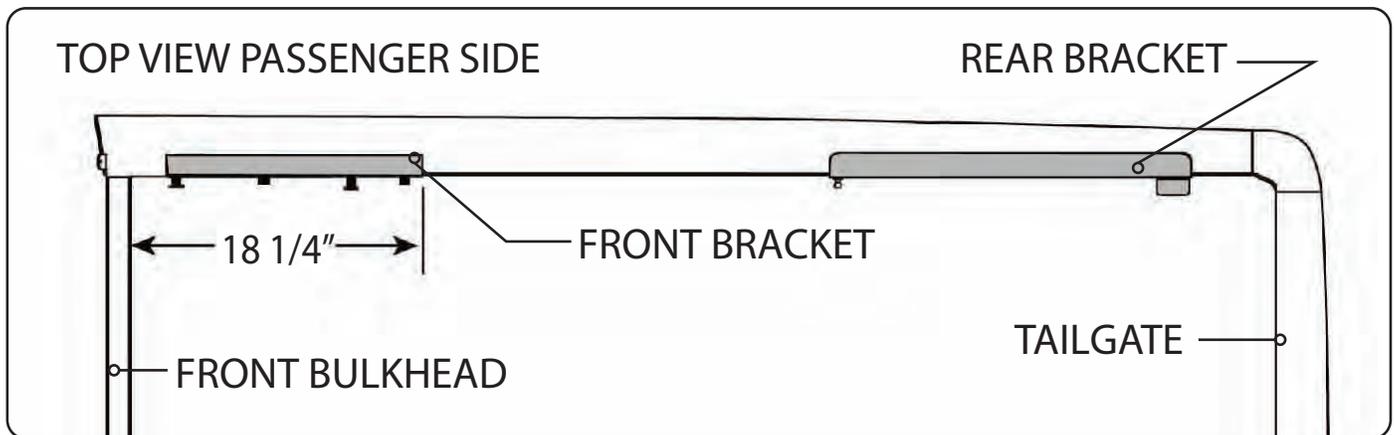




MODEL SPECIFIC GUIDE HIDDEN HINGE VERSION

Model 4158 Toyota Tundra 5.5' Short Bed 2022

Adjust the lock strikes up or down accordingly. With the tailgate down adjust the lock strike to allow approximately 1/8" (3mm) play in the cover up and down.

Torque to 8.5ft lbs or 100in lbs.

PASSENGER SIDE

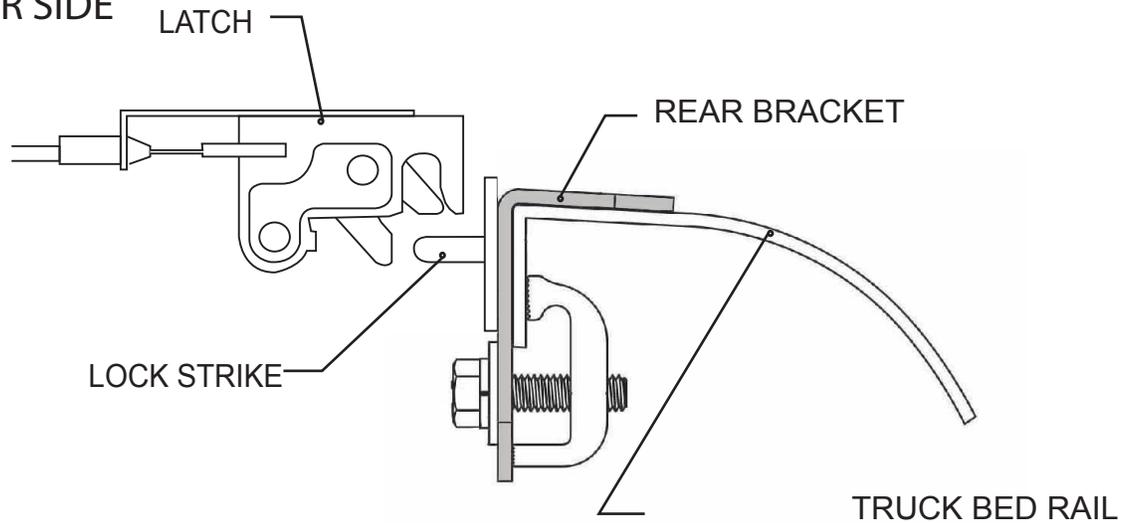

It may be necessary to adjust the latch side to side, to do so loosen the two latch mounting bolts, adjust latch and tighten.

Torque to 8.5ft lbs or 100in lbs.

PASSENGER SIDE

