



WEATHERBEATER™ FLOOR LINERS


PT #1414

CARE AND USE INSTRUCTIONS

Thank you for selecting a WeatherBeater™ Floor Liner from Husky Liners. Your new third seat liner is custom molded for your Suburban/Yukon XL/Escalade ESV with 2nd row bucket seating. Upon removal from the box your liner will not completely unroll and lay flat. This is normal and only temporary. Just place the liner on the floor or in the cargo area of your vehicle with a weight in each corner (a book works well). After about 15 minutes, your liner will remain flat. In colder climates this “relaxing” may take longer; moving the liner to a heated area will speed the process.

Your liner is manufactured using an engineering resin that is lightweight and extremely tough and durable. The easiest way to clean your liner is with a damp cloth or sponge. If using a cleaner, 409® or Glass Plus® work well. Do not use Armor All®, Son-of-a-Gun® or similar items as these products make the liner slick.

3RD ROW FLOOR LINER INSTALLATION INSTRUCTIONS FOR YOUR CHEVROLET SUBURBAN / GMC YUKON XL / CADILLAC ESCALADE ESC WITH 2ND ROW BUCKET SEATS

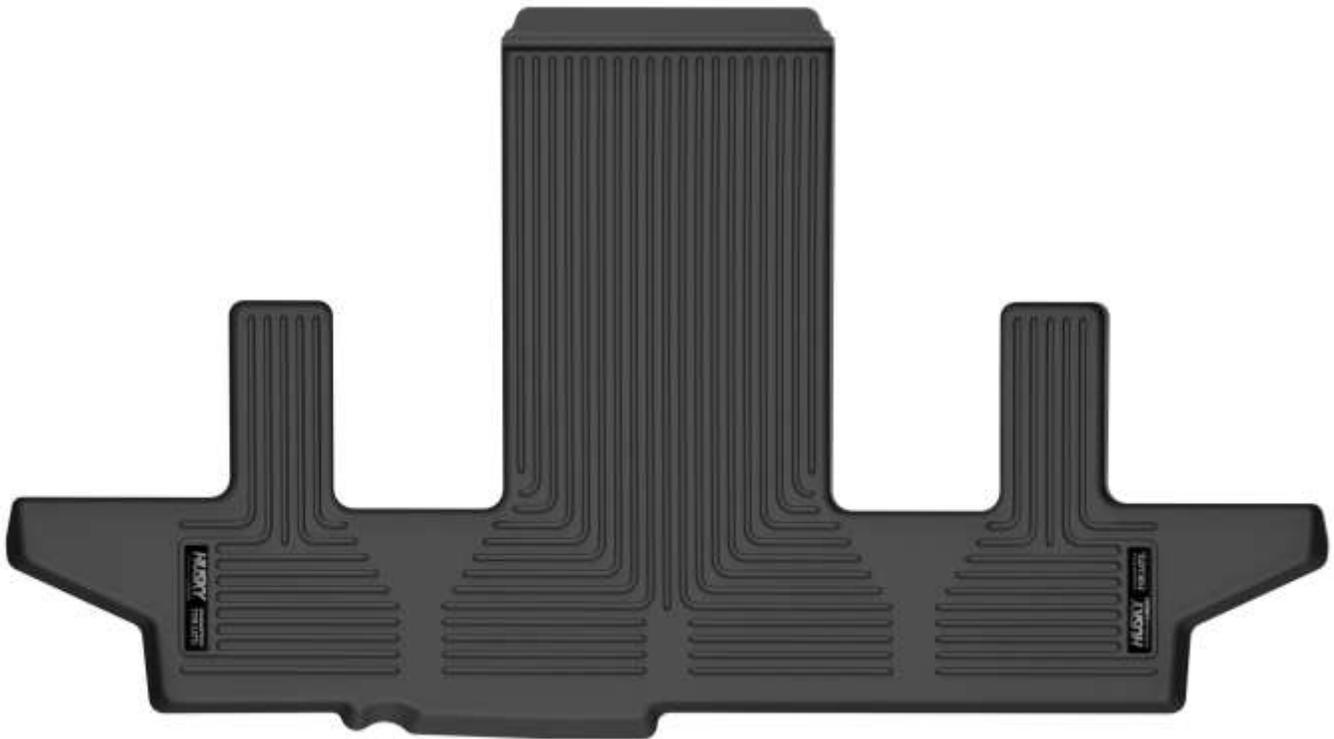

TO EASE INSTALLATION OF YOUR 3RD SEAT LINER, SLIDE THE 2ND ROW SEATS COMPLETELY FORWARD BEFORE INSTALLING. ONCE THE LINER IS IN PLACE, REPOSITION THE 2ND ROW SEATS AS DESIRED.