

# HUSKYLINERS®

## weatherBEATER


### CARE AND USE INSTRUCTIONS

---


Thank you for selecting a WeatherBeater® Floor Liner from Winfield Consumer Products. Your new front floor liners are custom molded to fit your Dodge Grand Caravan / Chrysler Town and Country van. The liners are made to take the place of your factory floor mats. **For correct fit, it is necessary to remove the factory floor mats before installing your new floor liners.** However, do not remove the factory-installed carpeting.

Your liners are made from an engineering resin that is lightweight and extremely tough and durable. The easiest way to clean your liners is with a damp cloth or sponge. If using a cleaner, 409® or Glass Plus® work well. Use of Armor All®, Son-of-a-Gun® or similar items is discouraged as these products make the liners slick.

## FRONT FLOOR LINER INSTALLATION INSTRUCTIONS FOR YOUR CHRYSLER TOWN AND COUNTRY / DODGE GRAND CARAVAN

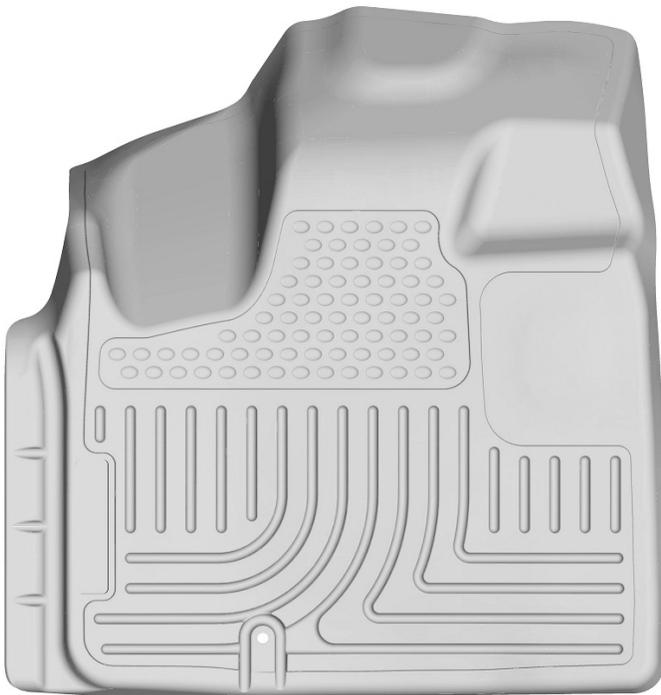

LEFT OR DRIVER'S

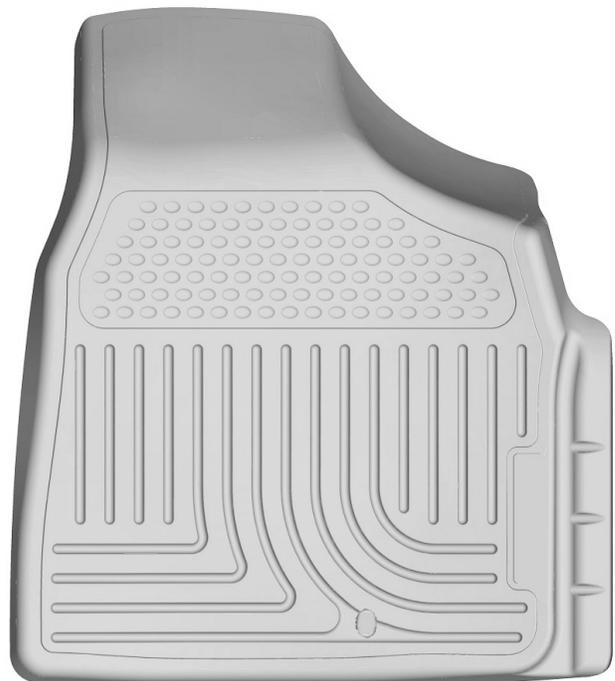

RIGHT OR PASSENGER'S SIDE

**PLEASE NOTE THAT THE DRIVER'S SIDE HUSKY FLOOR LINER IS DESIGNED TO FASTEN TO THE FACTORY MAT RETENTION HOOK LOCATED IN THE CARPET OF THE DRIVER'S SIDE FLOOR PAN. TAKE CARE TO MAKE SURE THE LINER IS FULLY SEATED OVER THE HOOK DURING INSTALLATION. A PHOTO OF THE LINER INSTALLED CORRECTLY IS INCLUDED ON THE BACK OF THIS PAGE.**

THE PASSENGER SIDE FLOOR ON SOME VEHICLE MODELS MAY INCLUDE A CARPET HOOK AS WELL. THE PASSENGER SIDE HUSKY FLOOR LINER HAS A RAISED BOSS THAT ALLOWS THE

LINER ACCOMMODATE THE PASSENGER SIDE CARPET HOOK.

TO EASE INSTALLATION OF YOUR FLOOR LINERS, POSITION BOTH FRONT SEATS TO THEIR MOST REARWARD POSITION (SO AS TO GIVE THE MOST LEG ROOM). ONCE LINERS ARE INSTALLED, REPOSITION SEATS AS DESIRED.

**PHOTO SHOWING LINER PROPERLY INSTALLED OVER EXISTING DRIVER'S SIDE FACTORY MAT RETENTION HOOK**

