


Thank you for selecting a WeatherBeater® Trunk Liner from Winfield Consumer Products. Your new cargo liner is custom molded to fit your Lexus GX460. Upon removal from the box your liner will not completely unroll and lay flat. This is normal and only temporary. Just place the liner on the floor or in the trunk of your vehicle with a weight in each corner (a book works well). After about 15 minutes, your liner will remain flat. In colder climates this "relaxing" may take longer; moving the liner to a heated area will accelerate the process.

Your liner is manufactured using an engineering resin that is lightweight and extremely tough and durable. The easiest way to clean your liner is with a damp cloth or sponge. If using a cleaner,  $409^{\circledR}$  or Glass Plus work well. Use of Armor All Son-of-a-Gun or similar items is discouraged as these products make the liner slick.

## CARGO LINER INSTALLATION INSTRUCTIONS FOR YOUR LEXUS GX460 (FITS OVER FOLDED FLAT 3<sup>RD</sup> ROW SEATS)

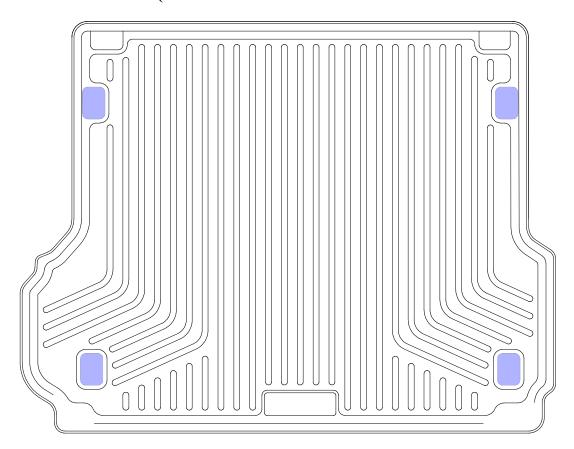

YOUR CARGO LINER IS DESIGNED TO FIT TO THE BACK OF THE 2<sup>ND</sup> ROW OF SEATS (WITH THE 3<sup>RD</sup> ROW SEATS FOLDED FLAT). THE LINER WILL ALLOW ACCESS TO THE FACTORY CARGO TIE-DOWN HOOKS WITH THE LINER IN PLACE. TO ACCESS THE HOOKS, SIMPLY TRIM AWAY THE MATERIAL FROM THE LOWERED AREA(S) IN THE LINER LOCATED ABOVE THE TIE-DOWN(S). THESE AREAS ARE SHOWN ABOVE DARKENED. A UTILITY KNIFE WORKS WELL FOR TRIMMING THESE AREAS.