


THANK YOU FOR SELECTING A HUSKY FLOOR LINER FROM WINFIELD CONSUMER PRODUCTS

CARE AND USE INSTRUCTIONS

Your new liner is custom molded to fit your vehicle. Upon removal from the box your liner will not completely unroll and lay flat. This is normal and only temporary. Just place the liner on the floor or in the back of your vehicle with a weight in each corner (a book works well). After about 15 minutes, your liner will remain flat. In colder climates this “relaxing” may take longer; moving the liner to a heated area will accelerate the process.

Your liner is manufactured using an engineering resin that is lightweight and extremely tough and durable. The easiest way to clean your liner is with a damp cloth or sponge. If using a cleaner, 409[®] or Glass Plus[®] work well. Use of Armor All[®], Son-of-a-Gun[®] or similar items is discouraged as these products make the liner slick.

INSTALLATION INSTRUCTIONS FOR YOUR TOYOTA FJ CRUISER

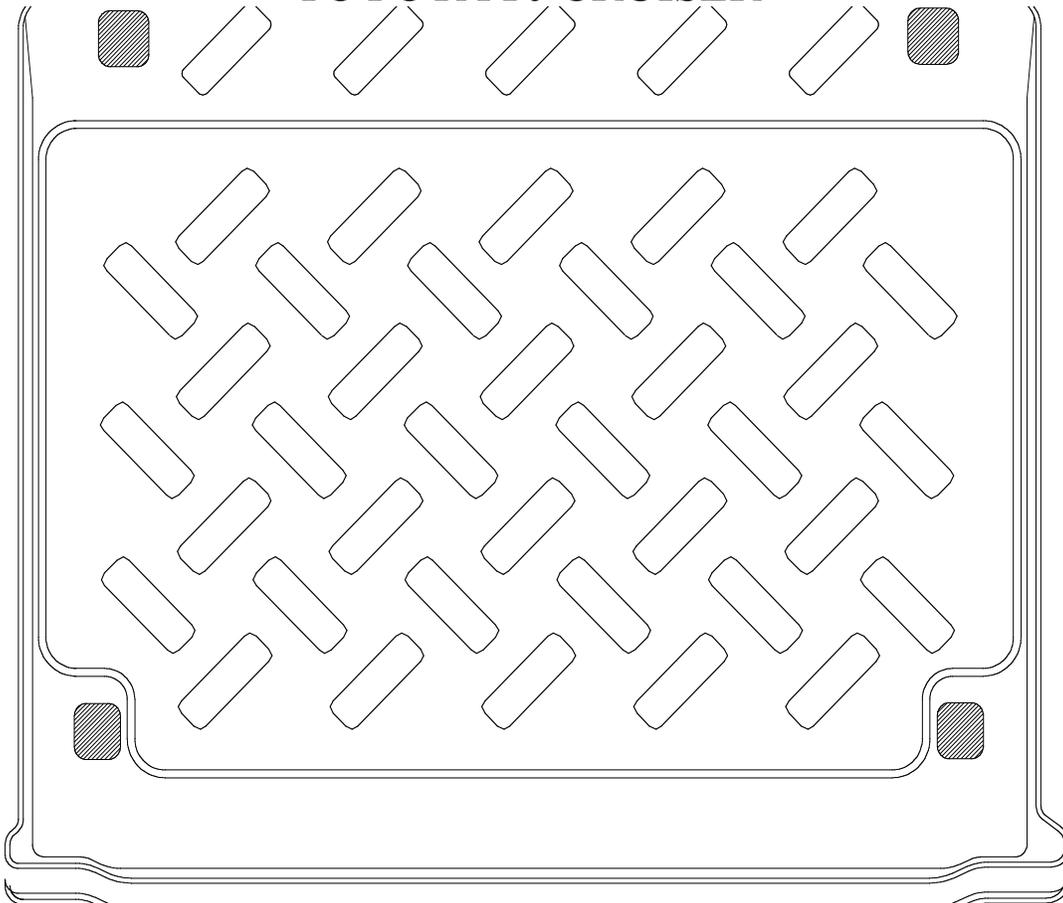

YOUR HUSKY LINER IS DESIGNED TO ACCOMMODATE SEVERAL FACTORY OPTIONS AVAILABLE ON YOUR FJ CRUISER. SOME TRIMMING IS INVOLVED IN ACCESSING THESE OPTIONS. PLEASE SEE PHOTOS ON BACK OF THIS PAGE FOR TRIMMING INSTRUCTIONS. A UTILITY KNIFE OR HEAVY SHEARS WORK WELL FOR TRIMMING.

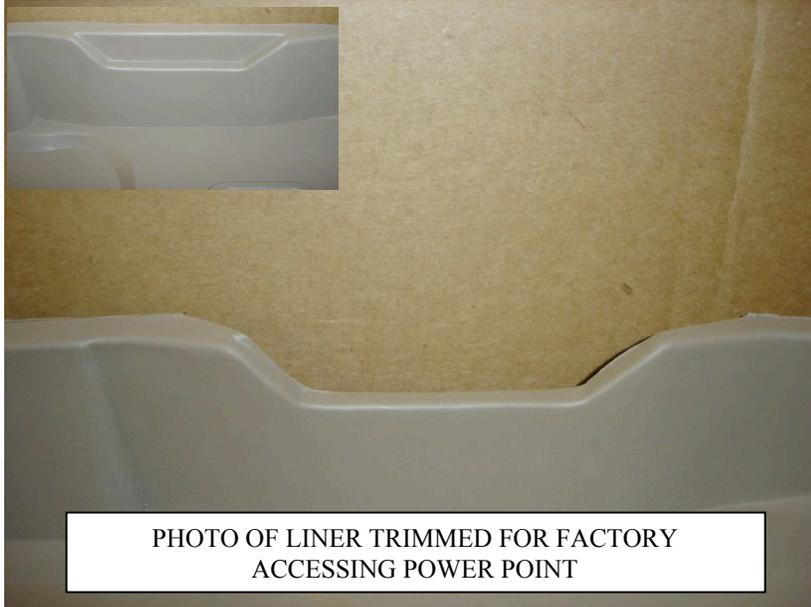


PHOTO OF LINER TRIMMED FOR FACTORY
ACCESSING POWER POINT


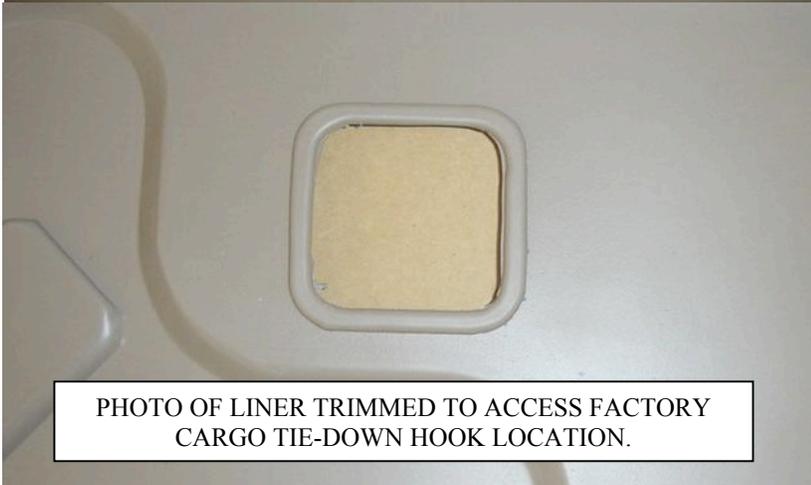


PHOTO OF LINER TRIMMED TO ACCESS FACTORY
CARGO TIE-DOWN HOOK LOCATION.

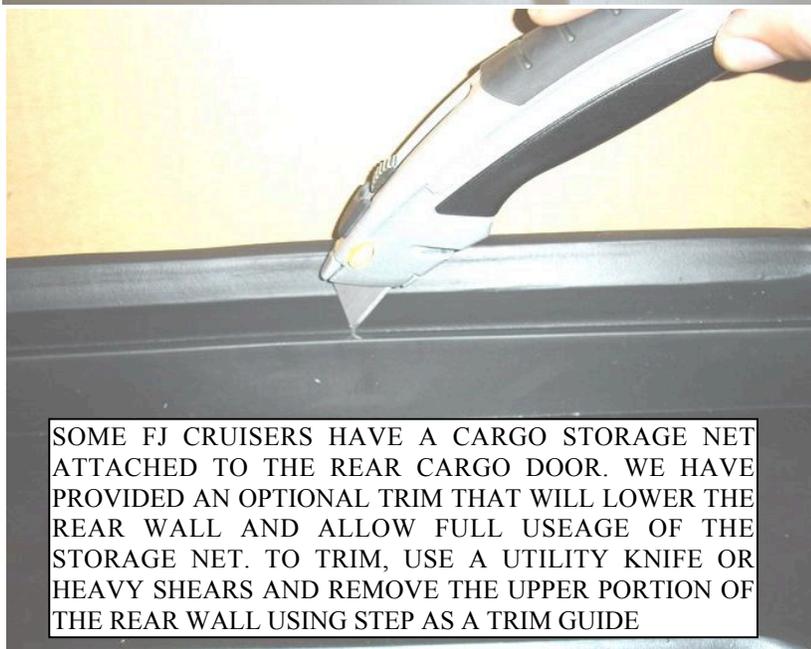

SOME FJ CRUISERS HAVE A CARGO STORAGE NET
ATTACHED TO THE REAR CARGO DOOR. WE HAVE
PROVIDED AN OPTIONAL TRIM THAT WILL LOWER THE
REAR WALL AND ALLOW FULL USEAGE OF THE
STORAGE NET. TO TRIM, USE A UTILITY KNIFE OR
HEAVY SHEARS AND REMOVE THE UPPER PORTION OF
THE REAR WALL USING STEP AS A TRIM GUIDE