

# THANK YOU FOR SELECTING A HUSKY FLOOR LINER FROM WINFIELD CONSUMER PRODUCTS


## CARE AND USE INSTRUCTIONS

---

Your new floor liners are custom molded to fit your particular vehicle. The liners are made to take the place of your factory floor mats. **For correct fit, it is necessary to remove the factory floor mats before installing your new floor liner.** However, do not remove the factory-installed carpeting.

Your liners are made from an engineering resin that is lightweight and extremely tough and durable. The easiest way to clean your liners is with a damp cloth or sponge. If using a cleaner, 409® or Glass Plus® work well. Use of Armor All®, Son-of-a-Gun® or similar items is discouraged as these products make the liners slick.

## INSTALLATION INSTRUCTIONS FOR YOUR SUBARU IMPREZA / IMPREZA OUTBACK / FORESTER

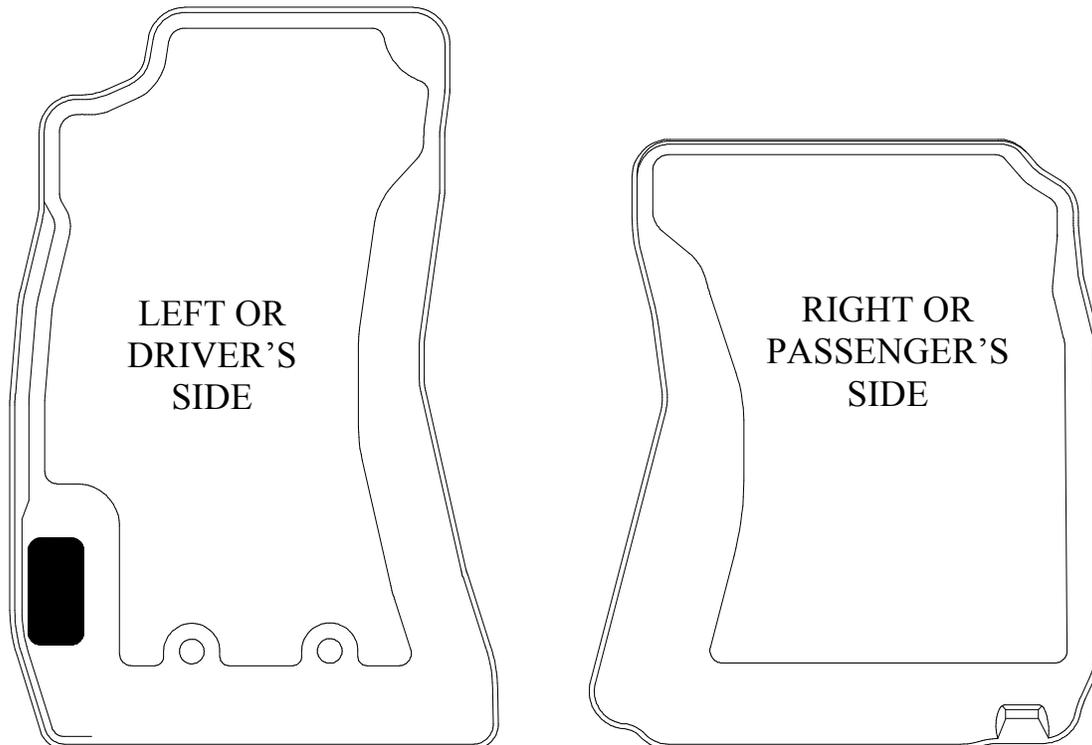

TO EASE INSTALLATION OF YOUR NEW FRONT FLOOR LINERS, MOVE THE FRONT SEATS TO THEIR MOST REARWARD POSITION. ONCE THE LINERS ARE INSTALLED, REPOSITION SEATS AS NEEDED.

TO ALLOW ACCESS TO THE FUEL DOOR RELEASE LEVER WITH YOUR LINER IN PLACE, SIMPLY TRIM AWAY THE MATERIAL FROM THE LOWERED AREA ON YOUR DRIVER'S SIDE LINER LOCATED ABOVE THE FUEL RELEASE LEVER. YOU CAN ALSO JUST LIFT LINER TO ACCESS THE LEVER. A UTILITY KNIFE WORKS WELL FOR TRIMMING. PHOTOS OF THE TRIMMED LINER ARE SHOWN BELOW.

PART #3407 SHOWN TRIMMED FOR ACCESS TO THE FUEL DOOR  
RELEASE LEVER. TO TRIM, USE THE MOLDED IN STEP AS YOUR GUIDE.

