


HUSKY **WeatherBEATER™** **Custom Vehicle Floor Protection**

CARE AND USE INSTRUCTIONS

Thank you for selecting a WeatherBeater™ Trunk Liner from Winfield Consumer Products. Your new trunk liner is custom molded to fit your Dodge Charger / Chrysler 300. Upon removal from the box your liner will not completely unroll and lay flat. This is normal and only temporary. Just place the liner on the floor or in the trunk of your vehicle with a weight in each corner (a book works well). After about 15 minutes, your liner will remain flat. In colder climates this “relaxing” may take longer; moving the liner to a heated area will accelerate the process.

Your liner is manufactured using an engineering resin that is lightweight and extremely tough and durable. The easiest way to clean your liner is with a damp cloth or sponge. If using a cleaner, 409® or Glass Plus® work well. Use of Armor All®, Son-of-a-Gun® or similar items is discouraged as these products make the liner slick.

INSTALLATION INSTRUCTIONS FOR YOUR CHRYSLER 300 / DODGE CHARGER TRUNK LINER

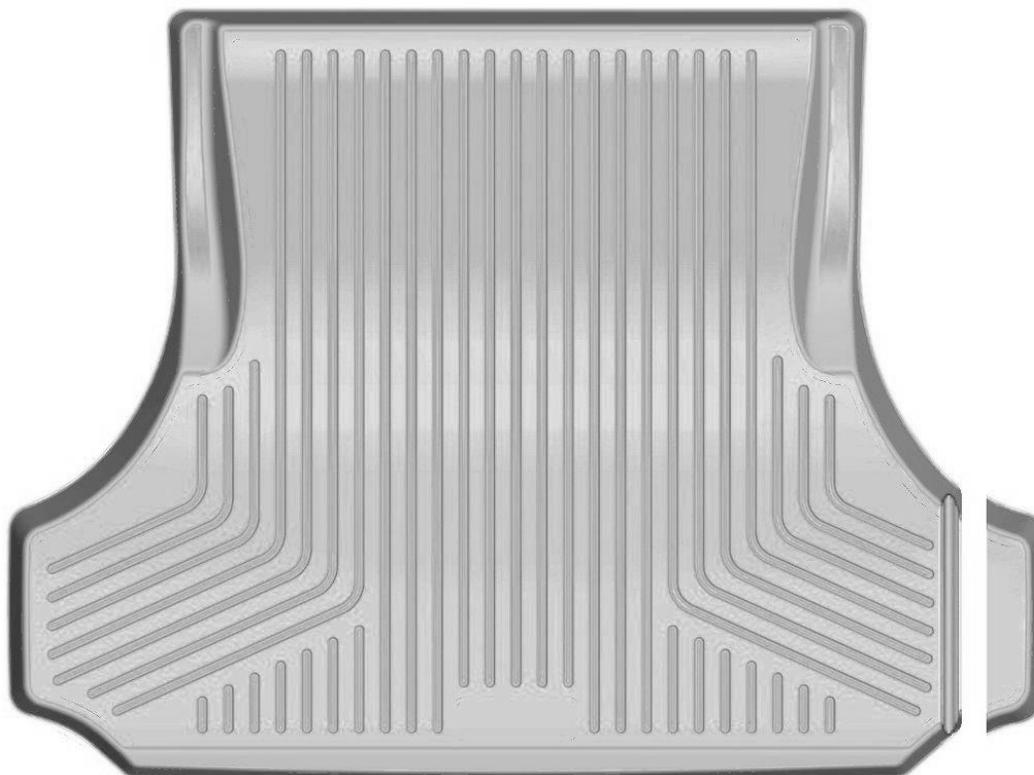

SOME CHRYSLER 300 AND DODGE CHARGER VEHICLES HAVE AN OPTIONAL SUBWOOFER MOUNTED IN THE TRUNK BEHIND THE PASSENGER SIDE WHEEL WELL. IF YOUR VEHICLE HAS THIS FEATURE YOU WILL NEED TO TRIM YOUR LINER AS SHOWN ABOVE. TRIMMING DETAILS AND PHOTOS CAN BE FOUND ON THE BACK OF THIS PAGE.

PART 40031 SHOWN UNTRIMMED AND TRIMMED. USE THE MOLDED IN STEP AS YOUR TRIMMING GUIDE. THE STEP RUNS ALONG THE RAISED RIB AND THEN CONTINUES UP THE SIDE WALLS

