



# X-ACT CONTOUR

## FLOOR LINERS

### CARE AND USE INSTRUCTIONS – PN:5311

---

Thank you for selecting X-act Contour™ Front Floor Liners from Husky Liners Inc. Your new front floor liners are custom molded to fit your specific vehicle's floor board. The liners are made to take the place of your factory floor mats. **For correct fit, it is necessary to remove the factory floor mats before installing your new floor liners.** However, do not remove the factory-installed carpeting.

Your liners are made from an engineering resin that is lightweight and extremely tough and durable. The easiest way to clean your liners is with a damp cloth or sponge and soap and water. Windex®, 409® and ArmorAll® type cleaners work as well.

LEFT OR DRIVER



RIGHT OR PASSENGER



PLEASE NOTE THAT THE DRIVER'S SIDE FLOOR LINER ATTACHES TO THE FACTORY FLOOR MAT RETAINING POSTS LOCATED IN THE DRIVER'S SIDE CARPETING. TO SECURE THE LINER TO THE POSTS, SIMPLY INSTALL THE LINER AND PUSH IT DOWN TO SEAT IT ONTO THE FACTORY POSTS.


INCLUDED IN THE PACKAGING WITH THE LINERS IS A RETENTION POST THAT CAN BE INSTALLED IN THE PASSENGER SIDE CARPETING TO AID IN FURTHER RETAINING THE LINER IN PLACE. PLEASE REFER TO THE BACK OF THIS PAGE FOR DETAILED INSTRUCTIONS ON INSTALLING THIS POST.

IF YOU HAVE VINYL FLOORING, BEFORE INSTALLING THE LINERS PLEASE CLEAN THE FLOOR WELL, REMOVING ALL DIRT AND DEBRIS. THEN, WIPE THE SURFACE WITH A DEGREASING CLEANSER LIKE SIMPLE GREEN OR FORMULA 409. THE RUBBERY MATERIAL WILL GRIP THE VINYL FLOOR WELL.

## HUSKY FLOOR LINER RETAINING CLIP INSTALLATION INSTRUCTIONS

**YOUR NEW LINER SET INCLUDES OUR NEW FLOOR LINER RETAINING CLIP SYSTEM. THIS RETAINING CLIP PROVIDES ADDITIONAL RETENTION WITHOUT THE ADDITION OF A HOLE. THIS KEEPS SPILLS AND DEBRIS TRAPPED INSIDE THE LINERS. TO INSTALL THE HUSKY® LINER RETAINING CLIPS, SIMPLY FOLLOW THE INSTRUCTIONS BELOW:**

- 1) Pre fit your new Xact Contour floor liner in your vehicle (Image 1).
- 2) Insert the screw-in carpet retention screw into the bottom of the Xact Contour liner (Image 2).
- 3) Press down on the liner to pre-mark the carpet screw into the carpet (Image 3).
- 4) Screw the carpet screw into the carpet with a flat blade screwdriver (Image 4).
- 5) Press the Xact Contour liner over the top of the carpet screw post (Image 3).

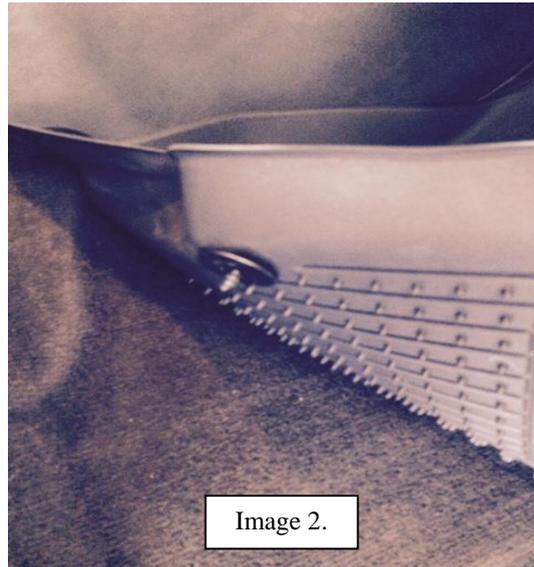

IF YOU HAVE ANY QUESTIONS REGARDING THE INSTALLATION OF YOUR HUSKY® LINER RETAINING CLIPS, JUST GIVE US A CALL MONDAY THROUGH FRIDAY FROM 8:00 AM – 5:00 PM CENTRAL TIME AT 800-344-8759 OR E-MAIL US AT: [contactus@huskyliners.com](mailto:contactus@huskyliners.com).



# X-ACT-CONTOUR

## FLOOR LINERS

### CARE AND USE INSTRUCTIONS – PN:53901

---

Thank you for selecting a X-ACT CONTOUR Floor Liner from Husky Liners Inc. Your new rear floor liner is custom molded to fit your Chevrolet Silverado/GMC Sierra Crew Cab truck. The liner is made to take the place of your factory floor mats. **For correct fit, it is necessary to remove the factory floor mats before installing your new floor liners.** However, do not remove the factory-installed carpeting.

Your liner is made from an engineering resin that is lightweight and extremely tough and durable. The easiest way to clean your liner is with a damp cloth or sponge. If using a cleaner, 409® or Glass Plus® work well. Use of Armor All®, Son-of-a-Gun® or similar items is discouraged as these products make the liner slick.

### INSTALLATION INSTRUCTIONS FOR YOUR CHEVROLET SILVERADO/GMC SIERRA CREW CAB TRUCK 2ND SEAT FLOOR LINERS



TO EASE INSTALLATION OF YOUR SILVERADO/SIERRA CREW CAB TRUCK SECOND SEAT LINER, MOVE BOTH FRONT ROW SEATS TO THEIR MOST FORWARD POSITION AND FLIP UP THE 2<sup>ND</sup> ROW SEATS. WITH THIS DONE, INSTALL YOUR LINER, POSITIONING IT AS SHOWN IN THE IMAGE ABOVE. ONCE THE LINER IS INSTALLED, REPOSITION THE FRONT SEATS AS DESIRED AND LOWER YOUR 2<sup>ND</sup> ROW SEATS.

YOUR LINER WILL WORK IN CONJUNCTION WITH THE HUSKY LINER GEARBOX™.